


*Exclusively by*




**PACIFIC  
INTERLOCK  
PAVINGSTONE INC.**

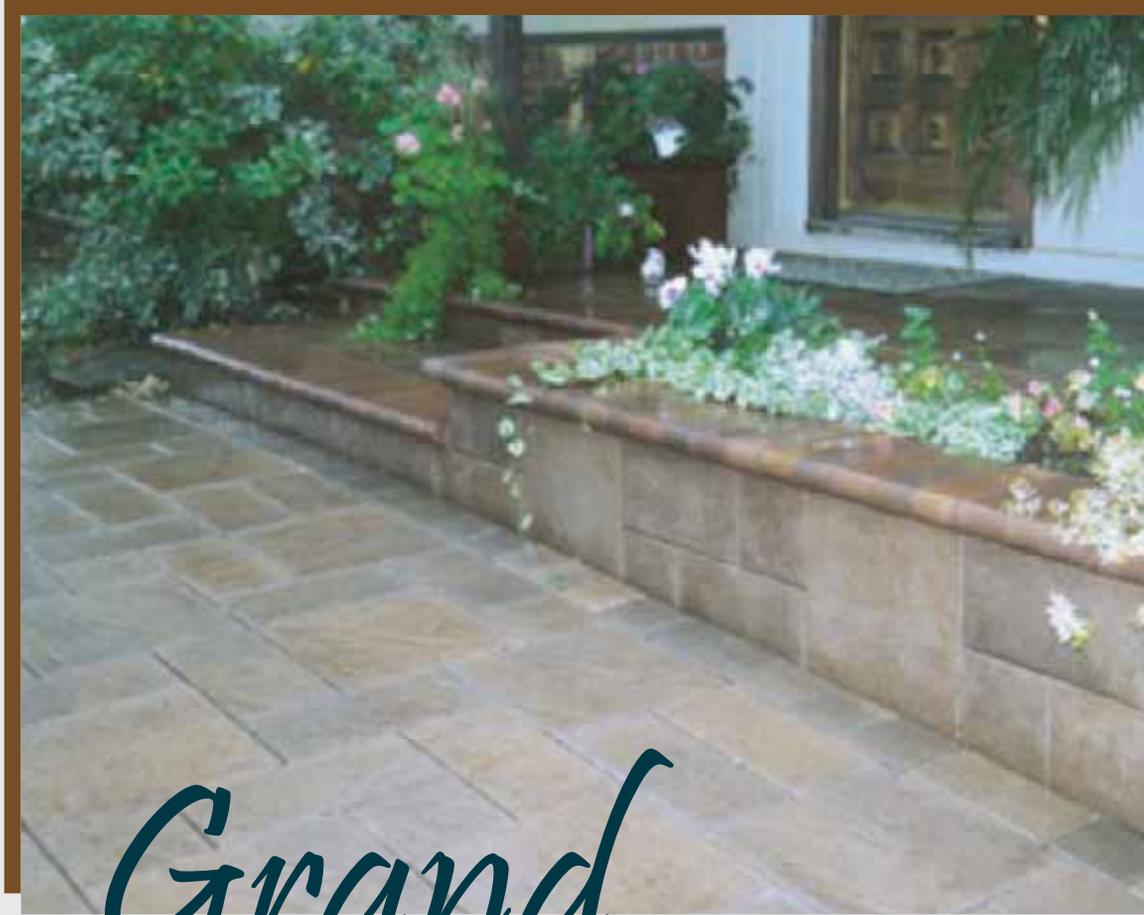

# *Grand Estate*

*The name says it all. Expect to be impressed with the timeless beauty and imaginative detail of this dramatic paver. The Grand Estate is exclusive to Pacific Interlock Pavingstone and available in five magnificent colors.*

# Grand Estate

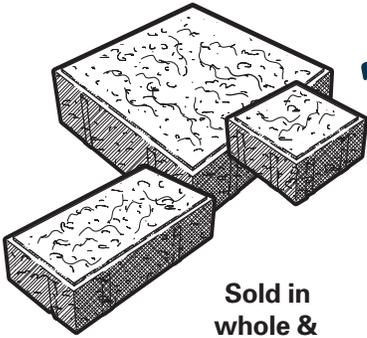


**Sold in whole & half pallets only.**  
Grand Estate pavers are not sold separately.

Approximately 90 Sq. Ft./Pallet  
28 Stones: 15.6 x 15.6 x 2-3/4"  
42 Stones: 15.6 x 7.6 x 2-3/4"  
14 Stones: 7.8 x 7.8 x 2-3/4"


Available colors:  
Charcoal, B3, B5, B6, B7, B10

**NOTE: These are 70mm thick. 2-3/4"**

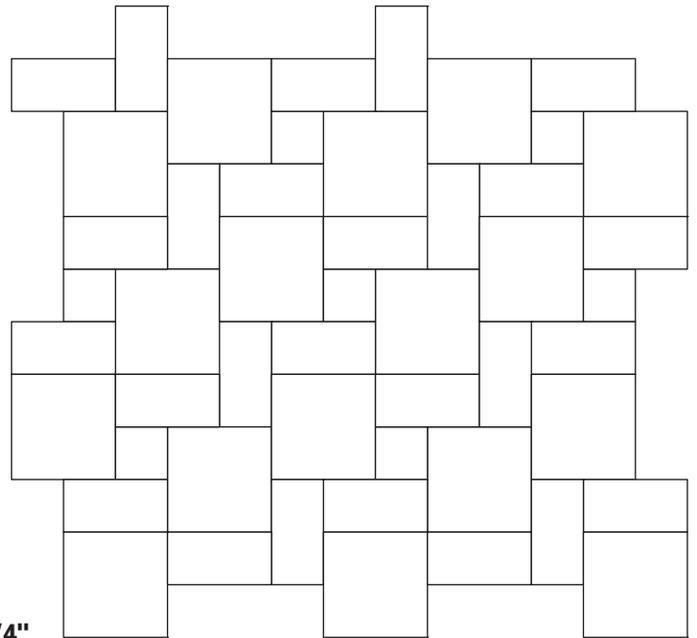

## Five Steps for Installation

- 1. Excavate to the proper design depth.** Remove all surplus unsuitable sub-base material. Compact the area, which has been cleared. Then backfill the area with aggregate suitable for base material. The depth of the base should be 3-4 inches for pedestrian sidewalks and patios, 6-8 inches for light vehicular traffic, and 8-12 inches for heavy vehicular and industrial use or as otherwise directed by the project engineer, Architect, or landscape Architect. Compact the base to 95% density.
- 2. Spread concrete sand evenly** over the base and screed to a uniform depth of 1 to 1-1/2 inches up to the edge. Note that edge restraints can be of various types, such as wood, plastic pavement edging etc. The screeded sand should not be disturbed until the pavers are laid.
- 3. Install the pavers in the desired pattern** 1/4 inch above final grade. To achieve the desired color distribution take stones from different pallets at the same time, using columns top to bottom and left to right across the pallet. Keep in mind that even solid color pavers have some variation in color and texture. These pavers should have a snug fit with integral ribs providing the correct clearance between adjoining stones. Use a fracture tool or saw to neatly cut the paving stones when required.
- 4. Sweep fine dry sand** over the pavers and into the joints. Vibrate the pavers into the bedding sand with a plate vibrator. At least two passes with the vibrator should be made across the surface, or until the joints are full. NOTE: To help prevent the scarring of the pavers surface, a rubber pad should be placed between the vibrator plate and the paving stones.
- 5. Sweep off excess sand.** The paver surface is now ready for use.

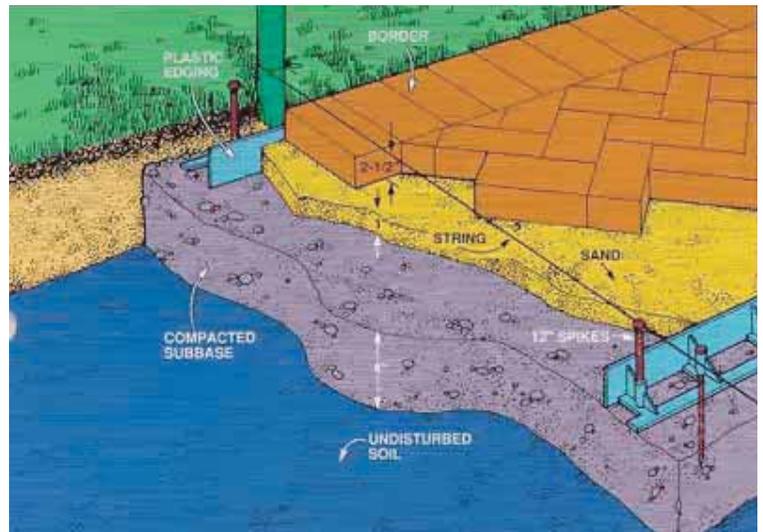

**PACIFIC  
INTERLOCK  
PAVINGSTONE INC.**

Plant:  
1895 San Felipe Road  
Hollister, CA 95023  
831.637.9163 phone  
831.637.0756 fax

Sales Office:  
1195 South De Anza Blvd.  
San Jose, CA 95129  
408.257.3645 phone  
408.257.3849 fax



[www.pacinterlock.com](http://www.pacinterlock.com)